



Hinged Opening Roof Window Installation Instructions

Introduction

... to your new Hinged Opening Roof Window

On delivery of your new Hinged Opening Roof Window, you will receive:

- Your Hinged Opening Roof Window
- Control box
- Remote control

Please take precaution when moving heavy objects and working at height; be sure to use proper equipment.





Assembly Procedure Guidance

Make sure to read through all steps and understand all requirements before beginning assembly.

In addition to your Hinged Opening Roof Window you will need:

- Silicone Adhesive Sealant (high quality; Dow Corning 791 suggested)
- Drill, bits and screws as required
- Materials to prepare a timber frame




Hinged Opening Roof Window Installation Instructions


Step One

Prepare a timber upstand for your rooflight

Prepare a timber upstand for your rooflight. The internal dimensions of your upstand should match the internal dimensions of your rooflight.

Your hinged opening roof window needs a slight pitch of 5° for rain to run off. If your roof does not have this pitch, build the angle into your upstand.

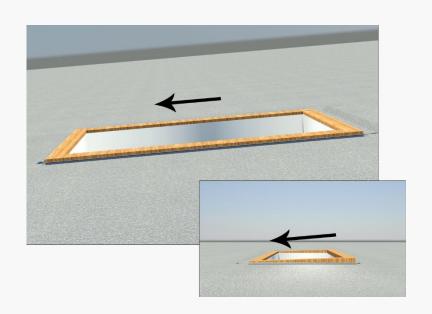

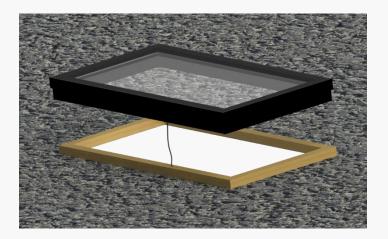

Step Two

Create a hole in your upstand to run the rooflight's cable through

First, mount the supplied control box in a desired location.

Trial fit your rooflight and mark a suitable location to drill a hole for the rooflight's electrical cable.

Create the hole and have a qualified electrician connect the cable to the control box.




Hinged Opening Roof Window Installation Instructions

Step Three

Apply silicone to your upstand

Bring your roof flashing over your upstand and apply a bead of silicone around the top face of the upstand, as shown.



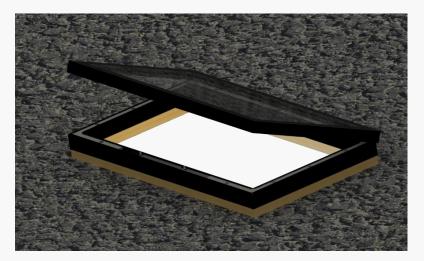

Step Four

Secure your rooflight to your upstand

Open the rooflight and secure it to your upstand through the holes provided in the top of the rooflight's kerb.

Congratulations! Your Hinged Opening Roof Window is now fully installed.



